

EN

Do not adjust the height of the ironing board when the iron is on the board. The iron may fall down and the board may suddenly fold by itself.

The device should be used only in dry locations. The device should be used only after setting it in.

The device shouldn't be used by children.

While ironing do not leave the iron on the board's cover. Do not touch the hot surface of the board. The manufacturer is not responsible for any harms done to persons and animals and damages to property which are the result of improper or incorrect use of the device.

To unfold the ironing board hold the top of the board with one hand, grab the moveable leg with the other hand and plug it into the hook underneath the top of the board. There are 3 height positions of the board's top that can be set according to individual needs. Be careful not to pinch your fingers while plugging the leg into the hook. To fold the board proceed in the reverse order: first unplug the moveable leg from the hook, then fold the board.

