

## **GB**

Do not adjust the height of the ironing board when the iron is on the board. The iron may fall down and the board may suddenly fold by itself.

The device should be used only in dry locations.

The device should be used only after setting it in working position on a flat, level surface.

The device shouldn't be used by children.

While ironing do not leave the iron on the board's cover. Do not touch the hot surface of the board.

The manufacturer is not responsible for any harms done to persons and animals and damages to property which are the result of improper or incorrect use of the device.

To unfold the ironing board hold the top of the board with both hands and press the lever while legs are placed on the even floor.

There are several height positions of the board's top that can be set according to individual needs. To fold the board proceed in the reverse order.

