

SI

Potah položte na žehliacu dosku, konce šnurok vytiahnite niekoľko centimetrov z lemovky.

Oba konce šnurky stiahnite nadol tak, aby potah obopol zaoblenie žehliacej dosky.

Šnurky napnite, kým potah nebude pevne priliehat k hranam žehliacej dosky

Art: C 34, C42, C48, C34F3, C42F3, C48F3



Art: DC 34 DC 42, DC 48, DC 34F3, DC 42F3, DC48F3, DC34 F3M, DC 42F3M, DC48F3M, DC34F3R, DC42F3R, DC48F3R

