[EN] – Instructions for Use

IMPORTANT: Please read these instructions for use carefully and keep them for future reference.

- WARNING: Keep out of reach of children.
- WARNING: Do not use the ironing board if any part is broken, damaged or missing. Check it before each use.
- Technical changes reserved. All dimensions are approximate.
- After use, it is recommended to store the product in a dry place and protect it from direct sunlight.
- Do not use corrosive or abrasive cleaning agents.

When using electrical/electronic components:


i) i) This product may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided that they are supervised or have been instructed in the safe use of the appliance and understand the hazards involved.
j) Children must not play with the ironing board/ironing aid.
k) Cleaning and user maintenance must not be carried out by children without supervision.
l) Unplug the appliance if a malfunction occurs, if the ironing board is not used for an extended period and/or before cleaning.
m) If the power cord of the ironing board is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid hazards.
n) Allow all appliances (e.g. ironing board, ironing aid and iron) to cool down completely before storing them.

Safety instructions for using the extension cord:

Do not connect extension cords in series.

Do not use the extension cord while it is covered.

Socket: 250 V~, 16 A.

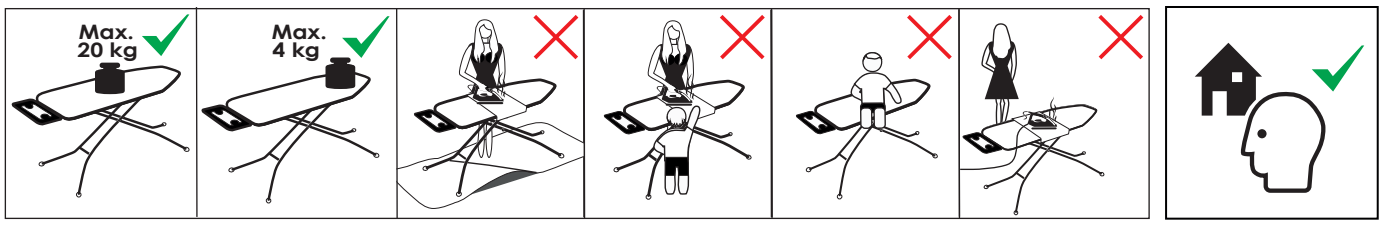

Производител/Výrobce/Hersteller/Manufacturer/Fabricante/
Κατασκευαστής/Gyártó/Produttore/Producent/Producător/Výrobca:

Eurogold Industries LTD
Promyslova 1/154, UA-10025 Zhytomyr,
office@eurogold-industries.com,
www.eurogold-industries.com

Упълномощен представител/Autorizovaný zástupce/Bevollmächtigter Vertreter/
Authorized representative/Representante autorizado/Εξουσιοδοτημένος αντιπρόσωπος/
Meghatalmazott képviselő/Rappresentante autorizzato/Przedstawiciel upoważniony/
Reprezentant autorizat/Splnomocnený zástupca:


Eurogold Handels GmbH
Sekull 12, A-9212 Techelsberg,
mail:office@eurogold-industries.com

[EN] – Instructions for Use


Do not adjust the height of the ironing board while the iron is on it. The iron may fall, and the ironing board may suddenly collapse on its own. The appliance should only be used in dry locations.

The appliance should only be used after it has been placed in the working position on a flat, level surface. The appliance must not be used by children. Do not place the iron on the ironing board cover while ironing. Do not touch the hot surface of the ironing board. The manufacturer is not responsible for injuries to persons or animals or for property damage resulting from improper or incorrect use of the appliance.

To unfold the ironing board, hold the top of the board with both hands and press the handle while the legs are positioned on a flat floor. The ironing board has several height settings that can be adjusted to individual needs. To fold the ironing board, follow the steps in reverse order.

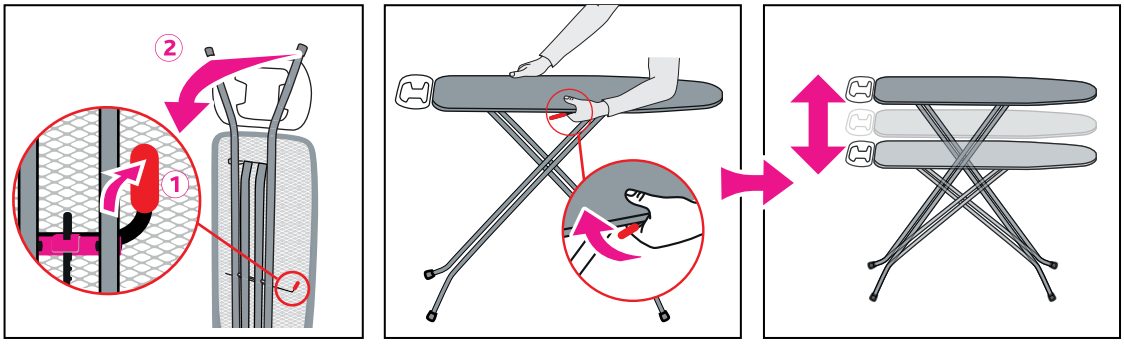

If applicable:

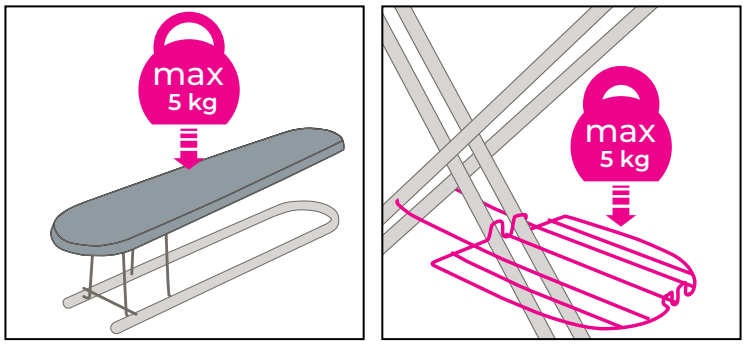

Производител/Výrobce/Hersteller/Manufacturer/Fabricante/
Κατασκευαστής/Gyártó/Produttore/Producent/Producător/Výrobca:

Eurogold Industries LTD
Promyslova 1/154, UA-10025 Zhytomyr,
office@eurogold-industries.com,
www.eurogold-industries.com

Упълномощен представител/Autorizovaný zástupce/Bevollmächtigter Vertreter/
Authorized representative/Representante autorizado/Εξουσιοδοτημένος αντιπρόσωπος/
Meghatalmazott képviselő/Rappresentante autorizzato/Przedstawiciel upoważniony/
Reprezentant autorizat/Splnomocnený zástupca:

Eurogold Handels GmbH
Sekull 12, A-9212 Techelsberg,
mail:office@eurogold-industries.com